



"VANCOUVER"
VALVE BOX

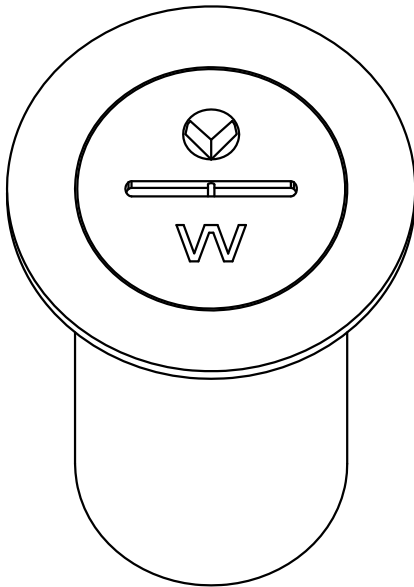


NOTES:

1. VALVE BOXES SHALL BE CENTERED DIRECTLY OVER THE VALVE NUT IN A VERTICAL POSITION.
2. VALVE BOX TOP SHALL BE ADJUSTED TO MEET FINISHED GRADE.

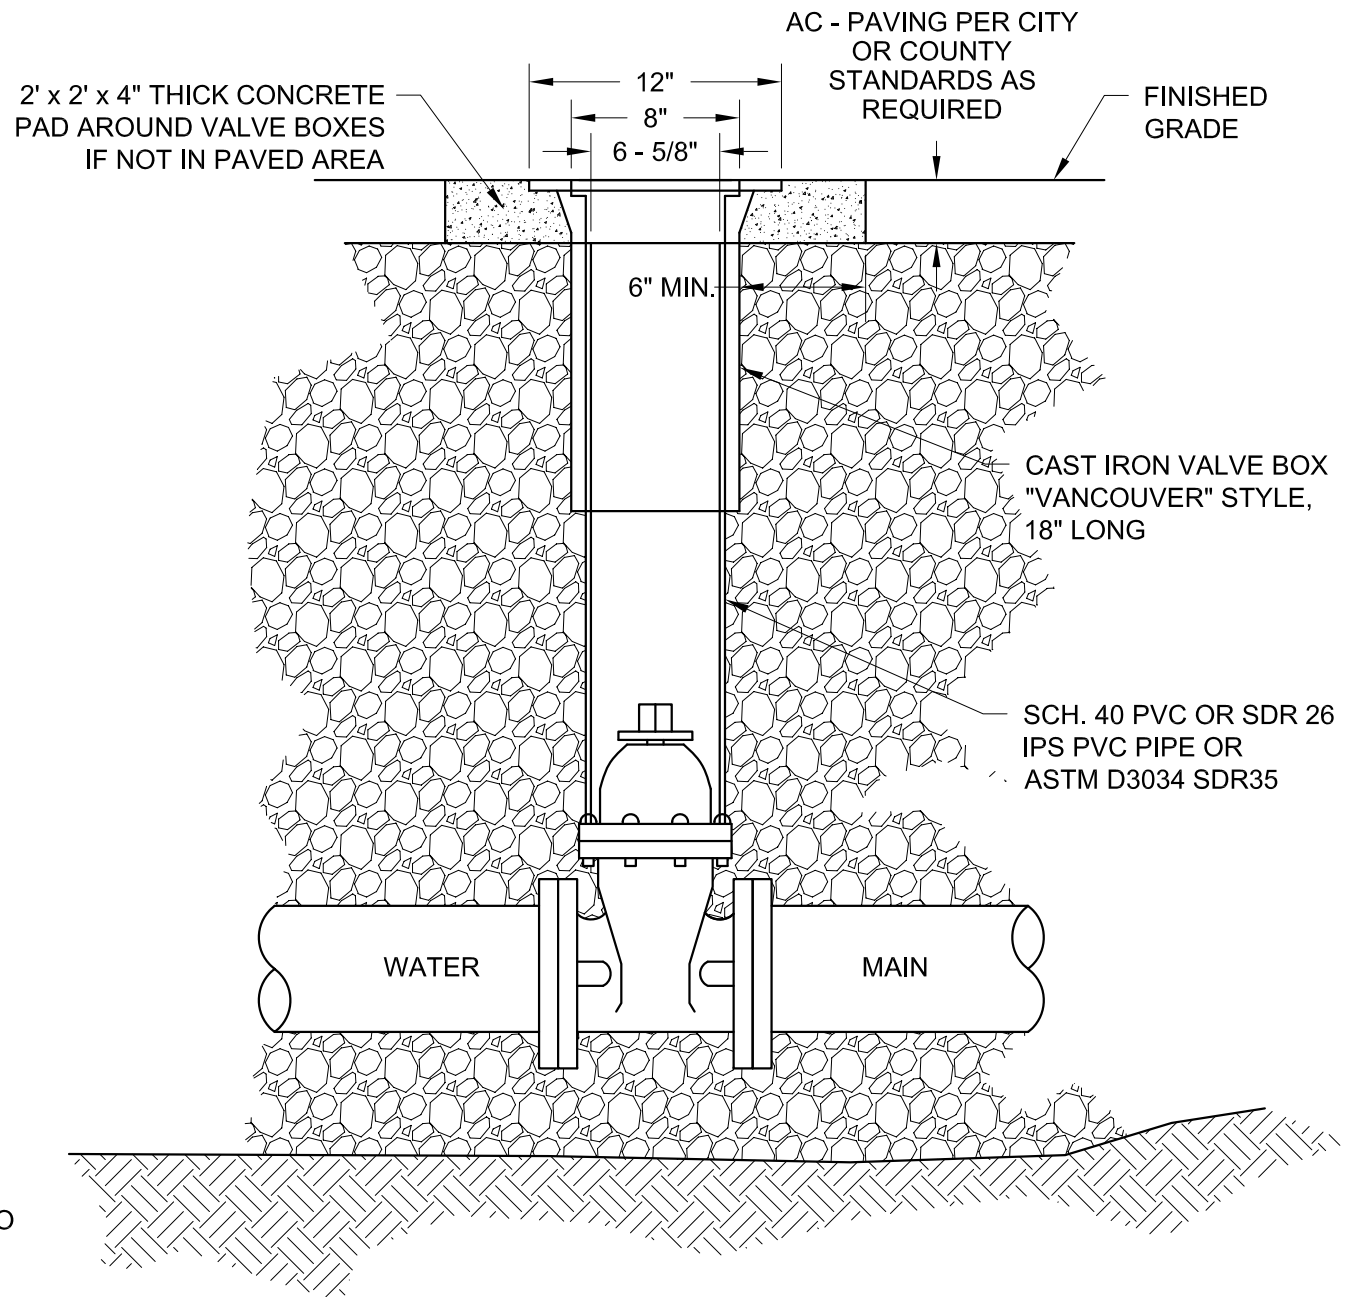

STANDARD VALVE BOX

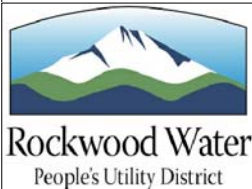

ROCKWOOD WATER PEOPLE'S UTILITY DISTRICT

19601 NE HALSEY ST., PORTLAND, OR 97230-7489, OFFICE: (503) 665-4179, FAX: (503) 667-5108

DRAWN BY: J. HUDSON

DATE: JANUARY 2, 2015

SCALE: N.T.S.

DWG NO: SD-30